



Arti

230x280 cm




Specification

Unmounted panels for safe transportation

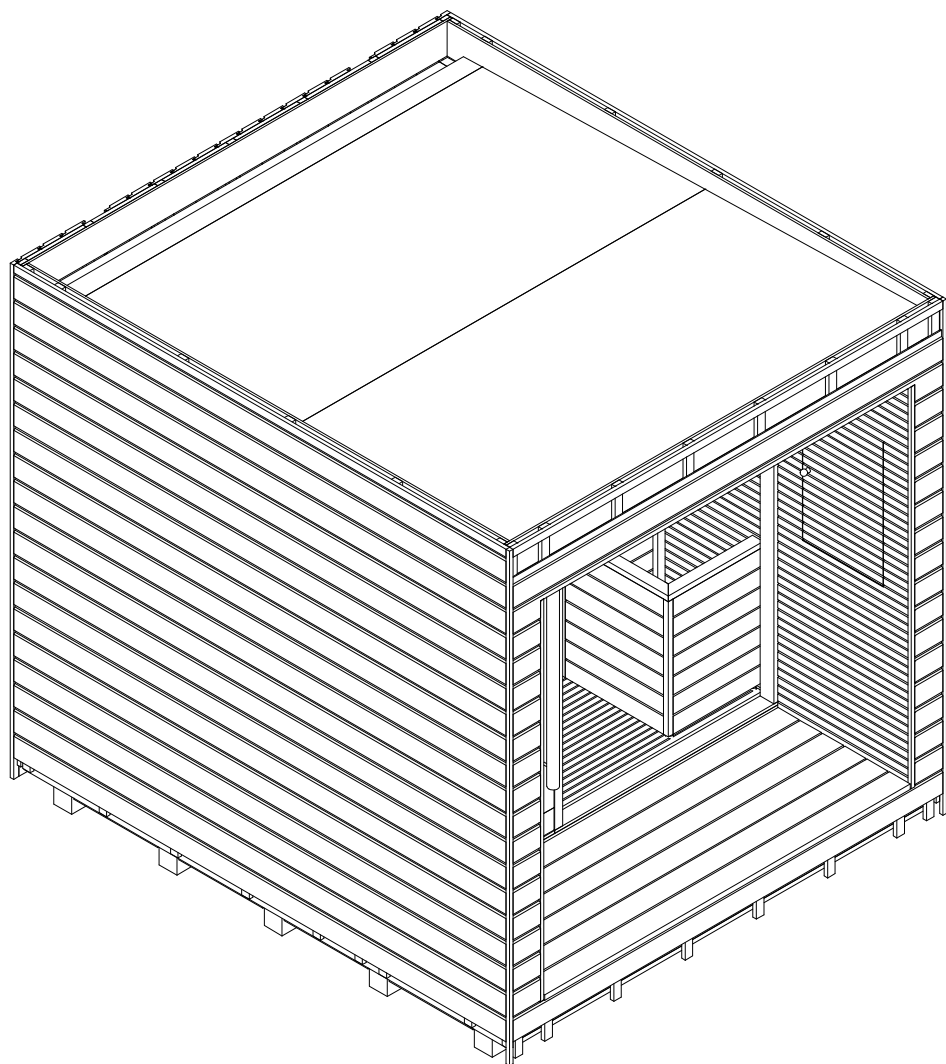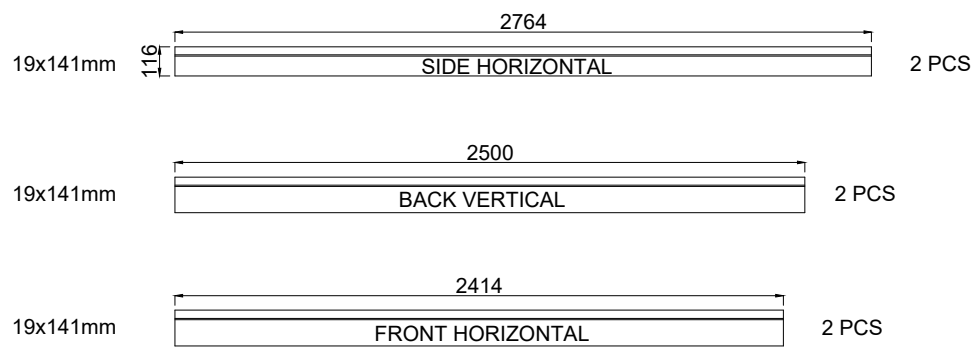


# 1. Transportation laths

1. Your sauna already have transport laths mounted by ou company.
2. When re-transporting start fixing transportation laths from the back of the sauna.

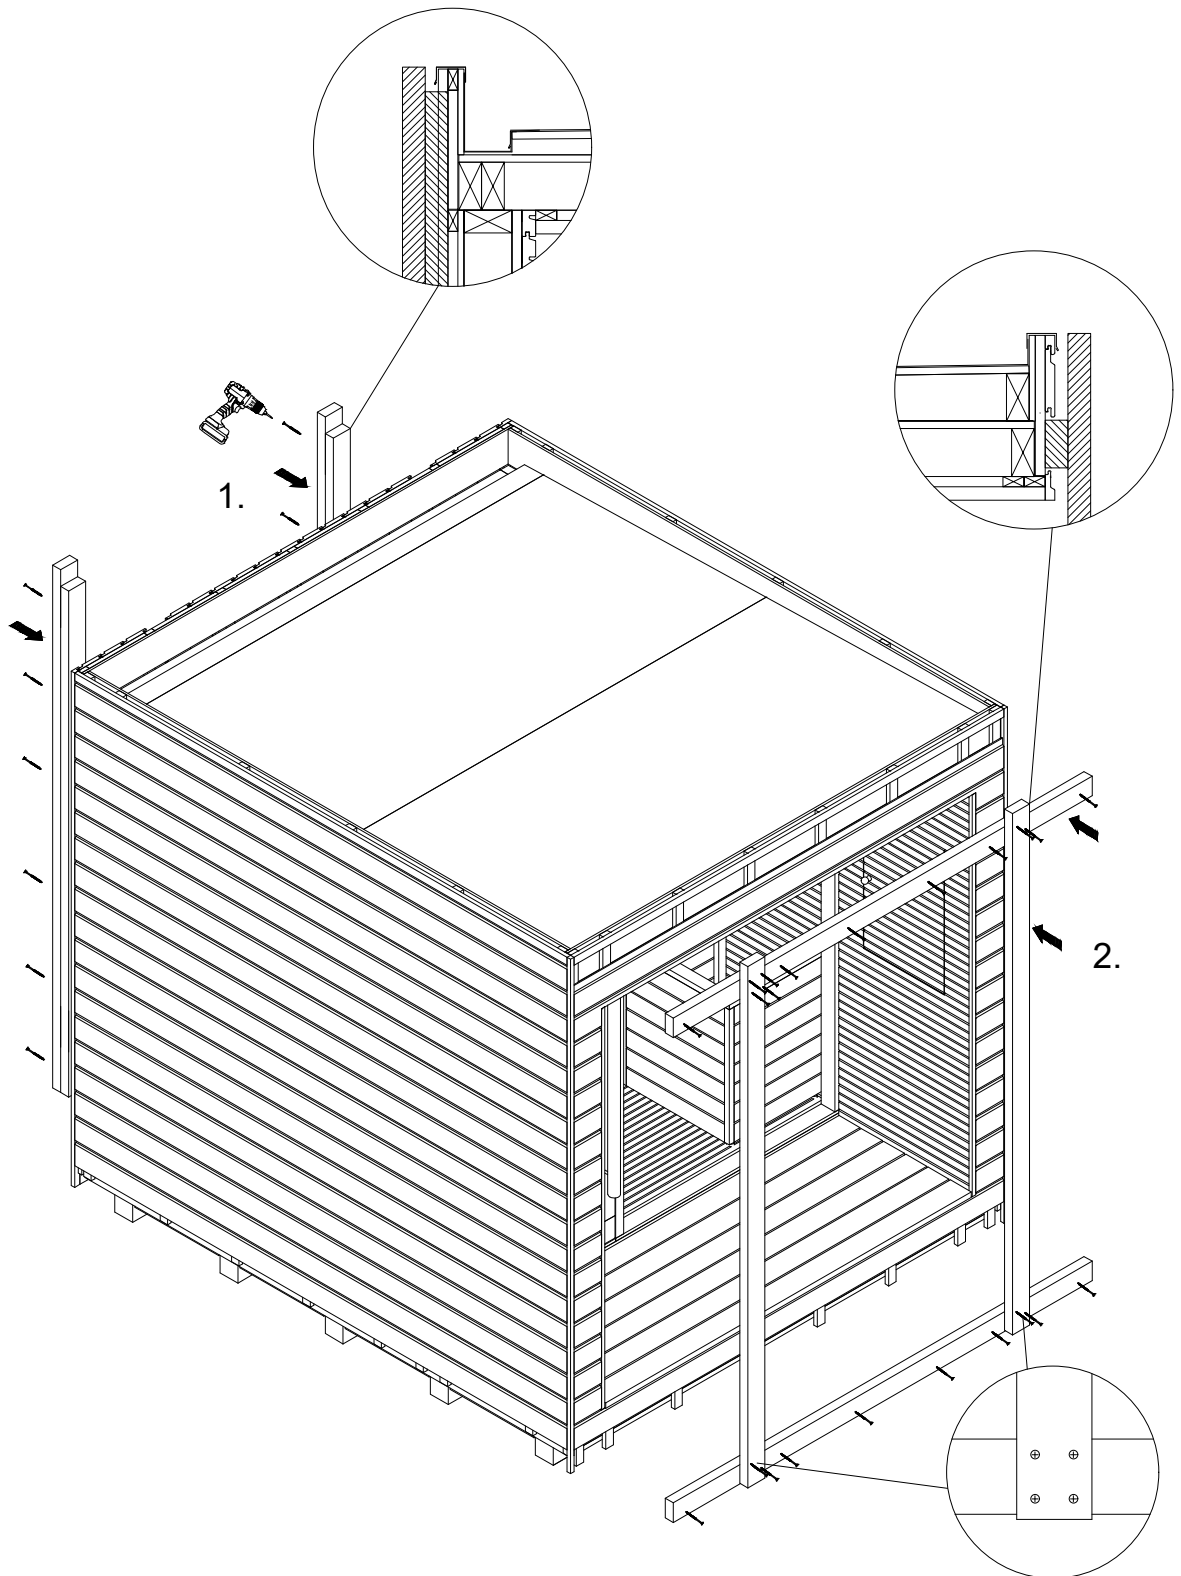


## 2. Transportation strips and loading on to the trailer

1. Place transportation strips on the bottom of the trailer.
2. Sauna will be lifted on the strips and fixed to the trailer with load straps to prevent sliding.
3. When unloading also with forklift follow the signs on pallet.

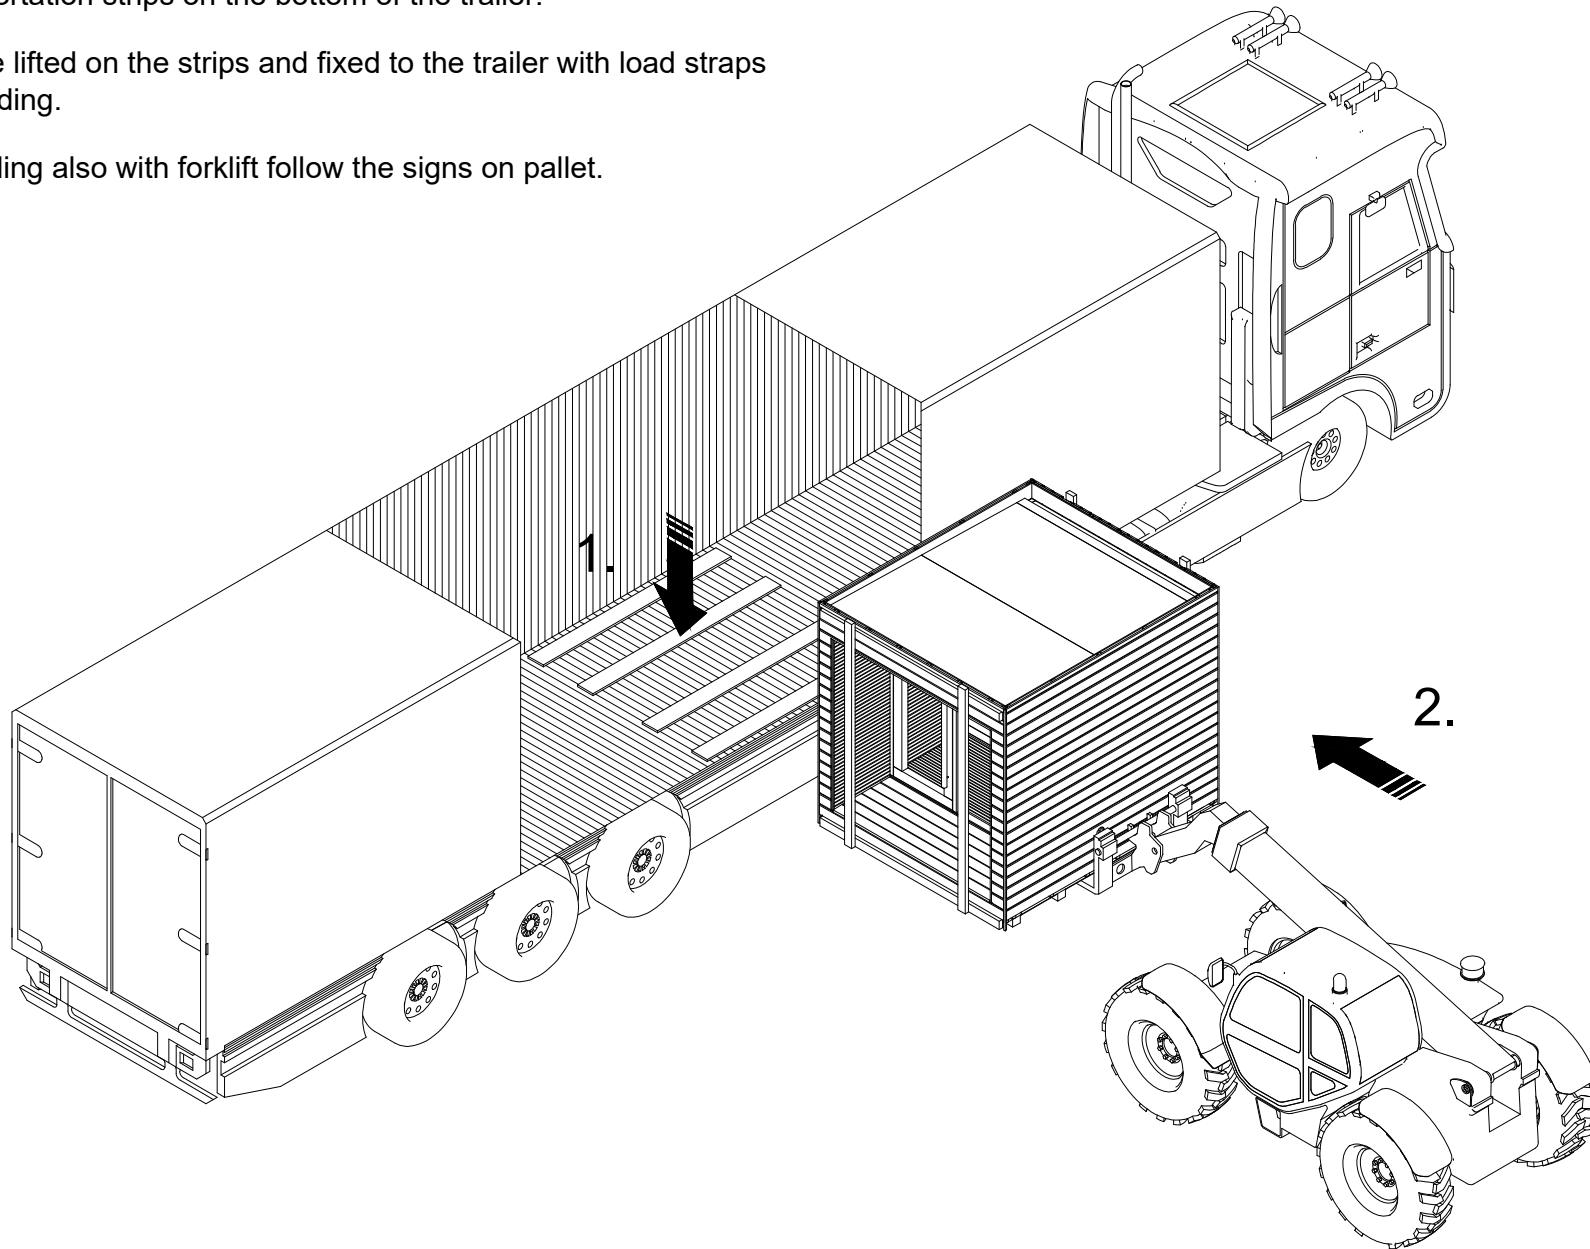


### 3. Unloading from the trailer

1. Open up top and back of the trailer. Lift sauna up a bit.
2. Drive the truck slowly away from the position and lift the sauna to its place.
3. Follow the signs on pallet for right strip placement.

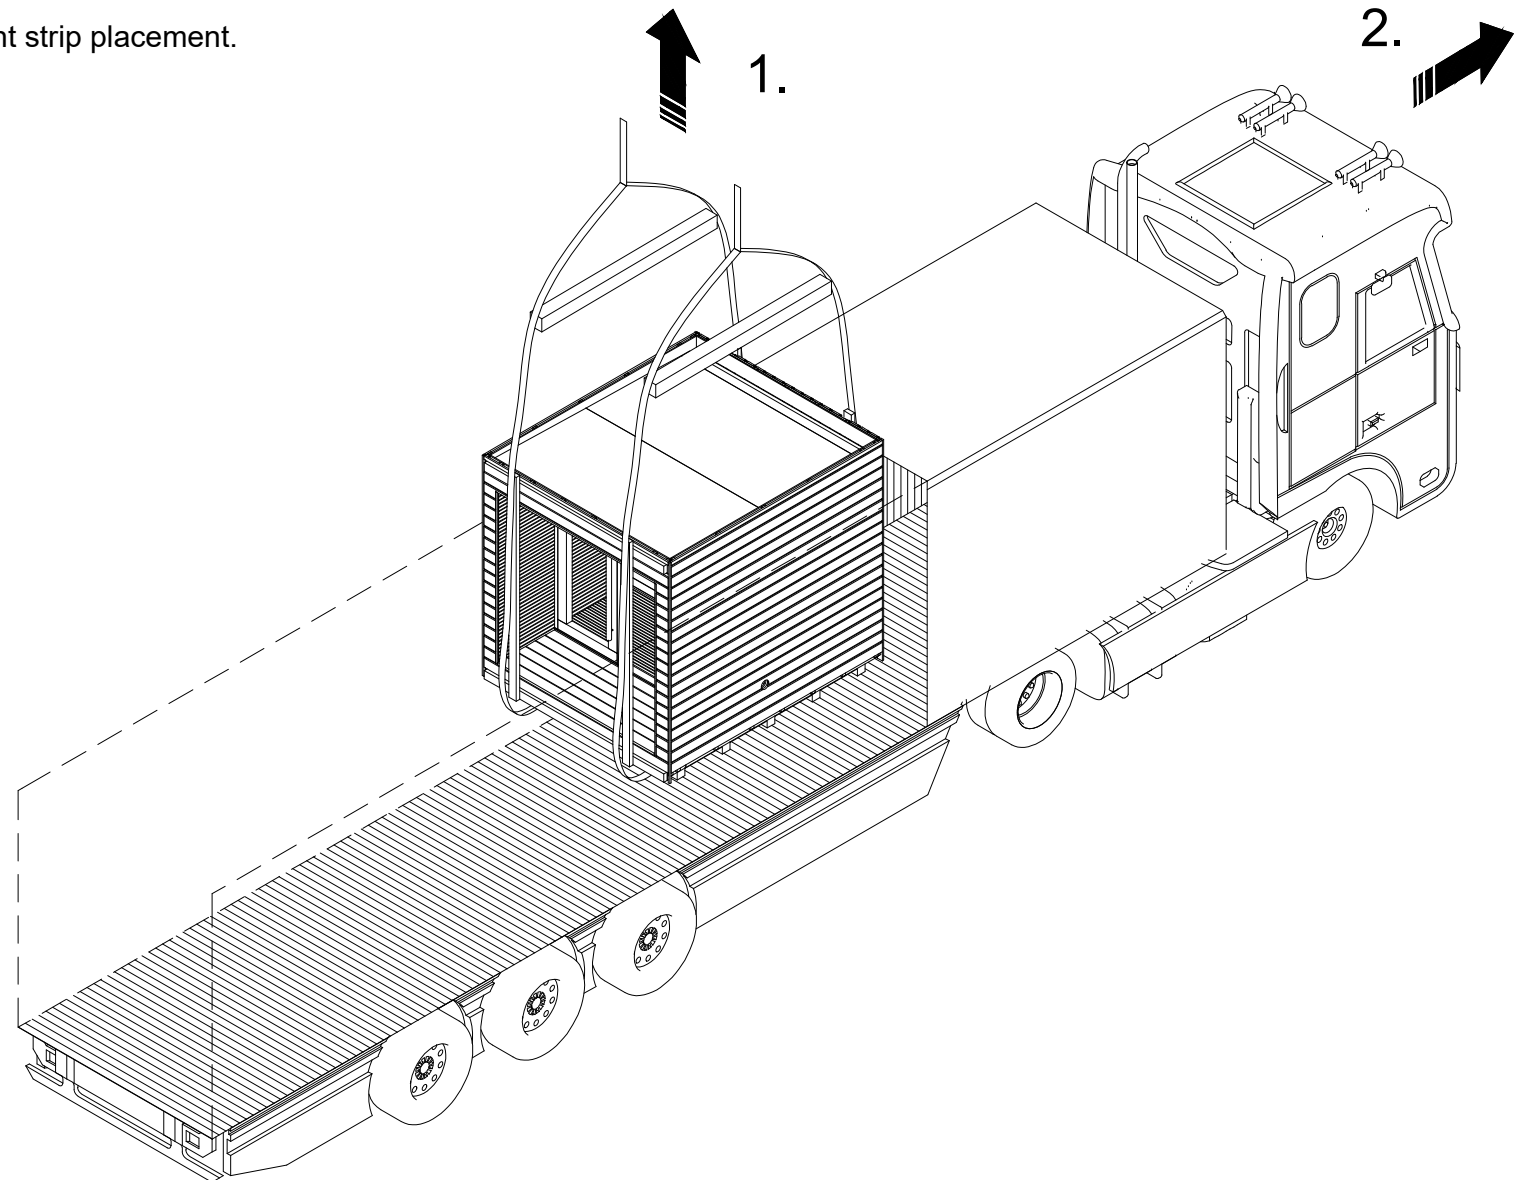


## 4. Boards installation

1. Install the missing horizontal and vertical boards. For fixing use black screws (packed with sauna).

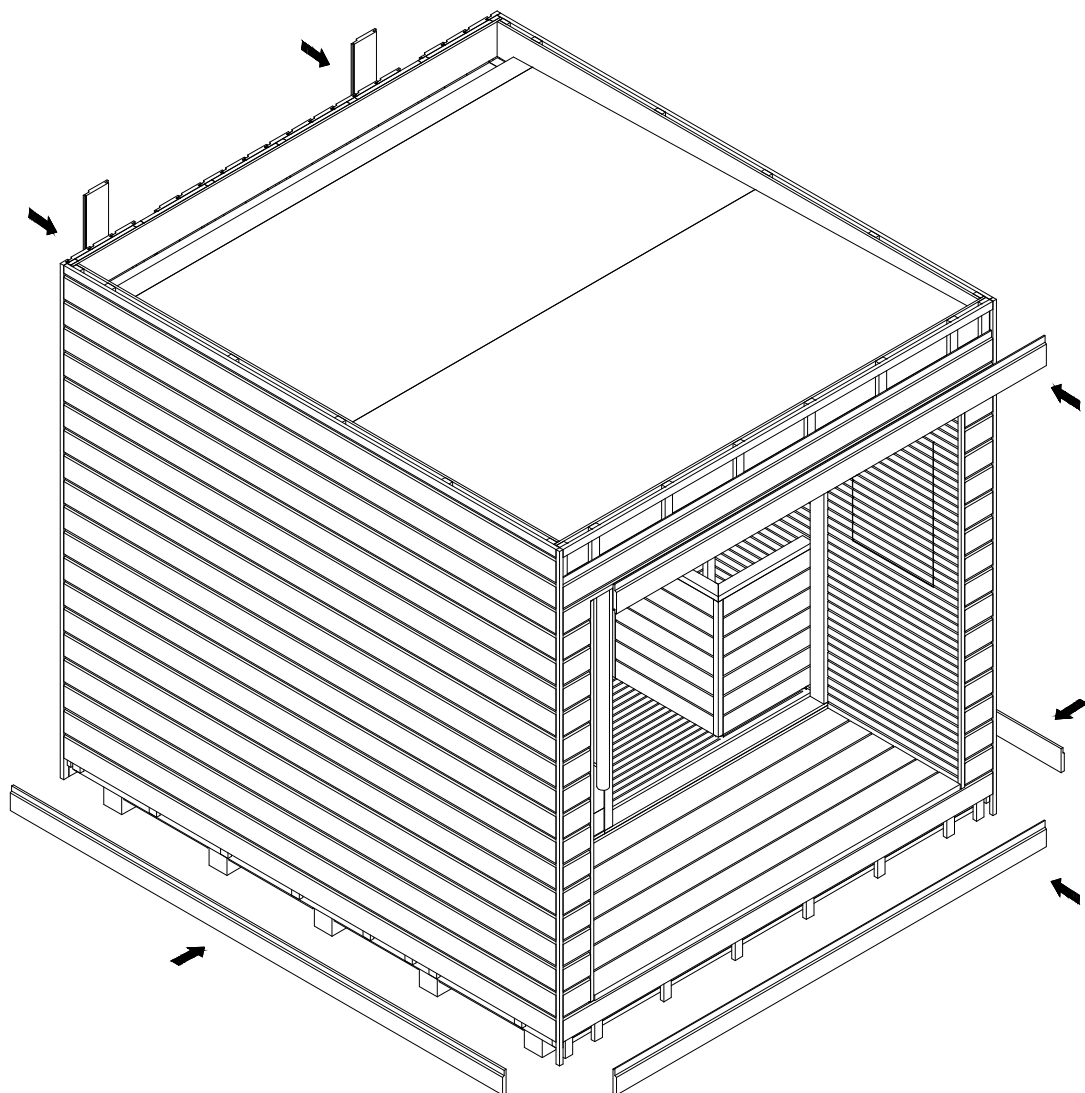

## 5. Electrical input location

1. Always use certified electrician for final connection.
2. Remove all packing details from sauna before using.
3. There is extra paint with your pallet to use for minor paint corrections if needed.

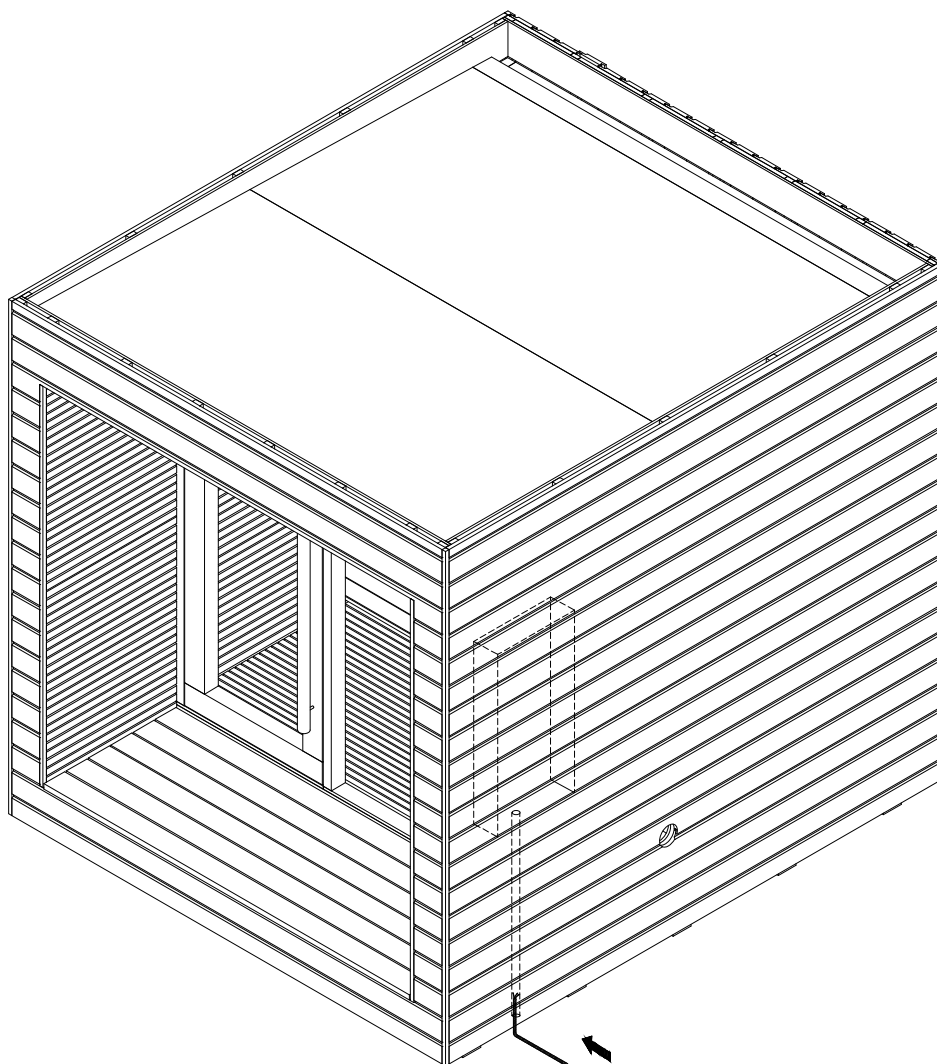

Electrical cable input location  
(Pipe goes to the electrical box from the bottom of the wall)